

P-SIT

Operating Instructions

OPERATING INSTRUCTIONS

1. Seat Height Adjustment: Raise lever (1) to raise or lower height of seat.
2. Back Angle Adjustment: Raise lever (2) to set back angle, push down to lock into desired position.
3. Seat Angle Adjustment (EP15/25 only): Raise lever (3) to set seat angle, push down to lock into desired position.
4. Seat Slide: (If applicable) Raise lever (4) to alter seat depth by sliding body forward, push down to lock into desired position.
5. Back Height Adjustment: In seated position, raise backrest (5) manually to desired position. Ratchet mechanism will lock into several height positions. When ratchet reaches top, it will release back to the lowest position.
6. Adjustable Lumbar Support: In seated position, raise lumbar panel (6) manually to desired position.
7. Inflatable Lumbar: (If applicable) the hand pump (7) at the rear of the seat will inflate the lumbar when squeezed. Depressing the valve will deflate the lumbar.



posturite.co.uk